



# INSTRUCTION TO SET-UP THE HYPER TERMINAL


1. Open Hyper terminal on the PC and follow the steps below.

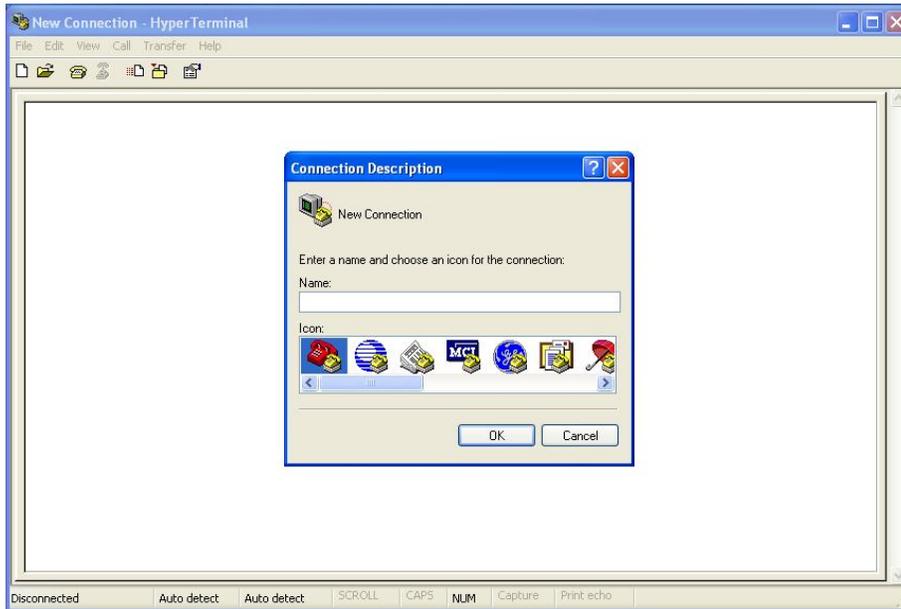


- 2.

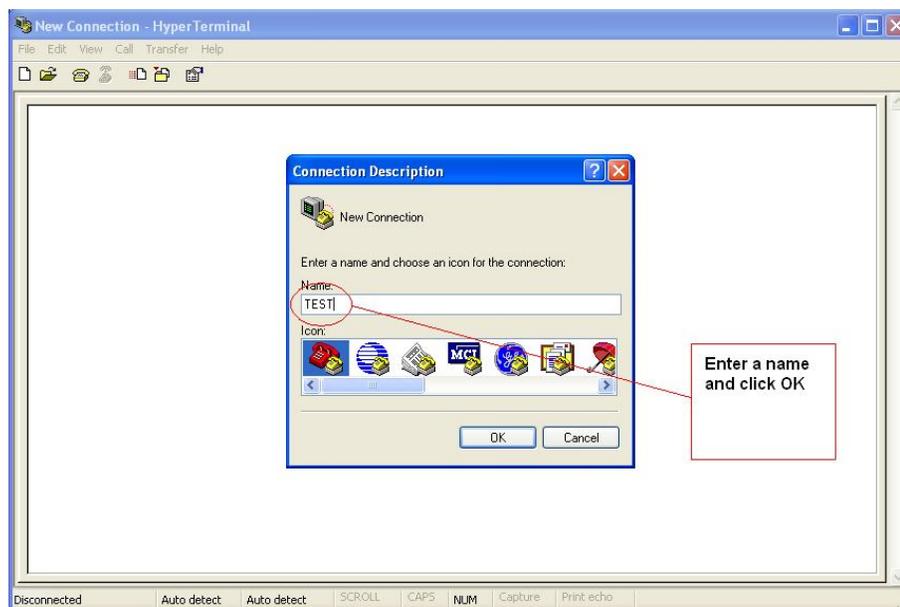

3. Connect To window appears

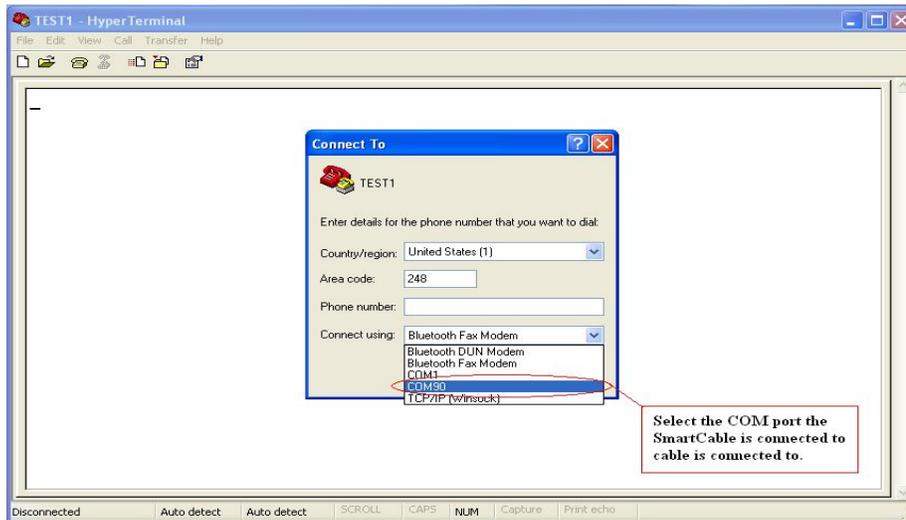

4. Next COM1 Properties window opens,

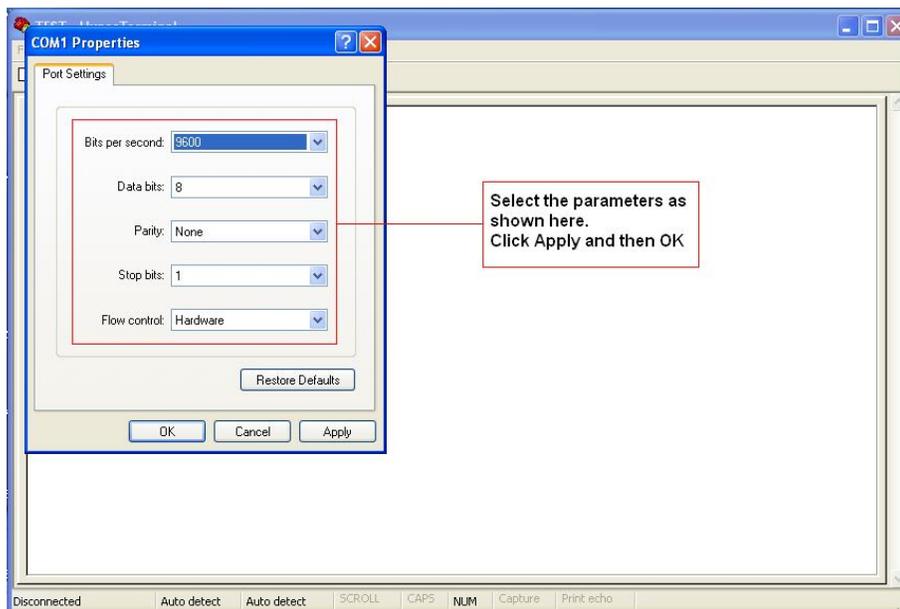

Bits per second: 9600


Data bits:8

Parity: None


Stop bits: 1

Flow control: None


5. Next on the hyperterminal window,

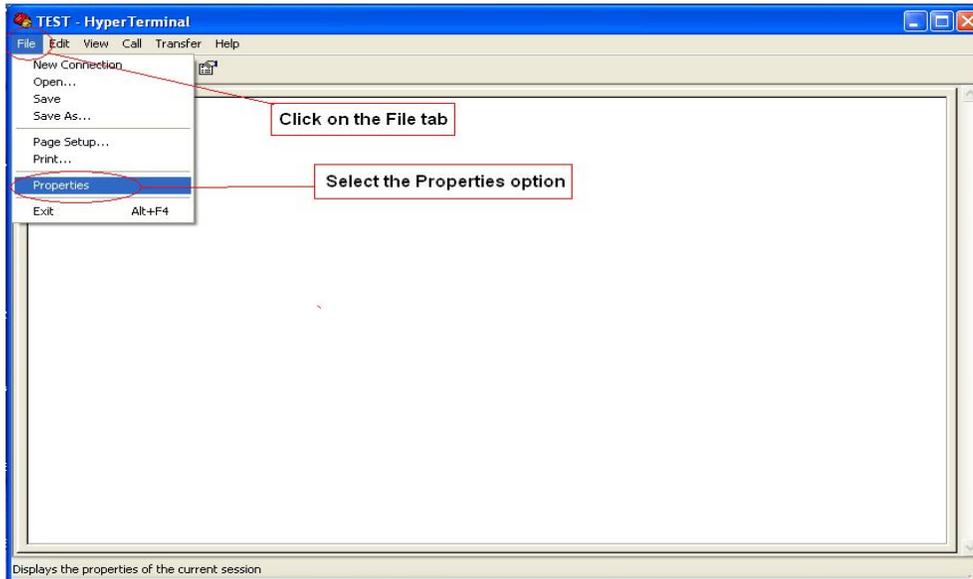

6. The TEST Properties window appears

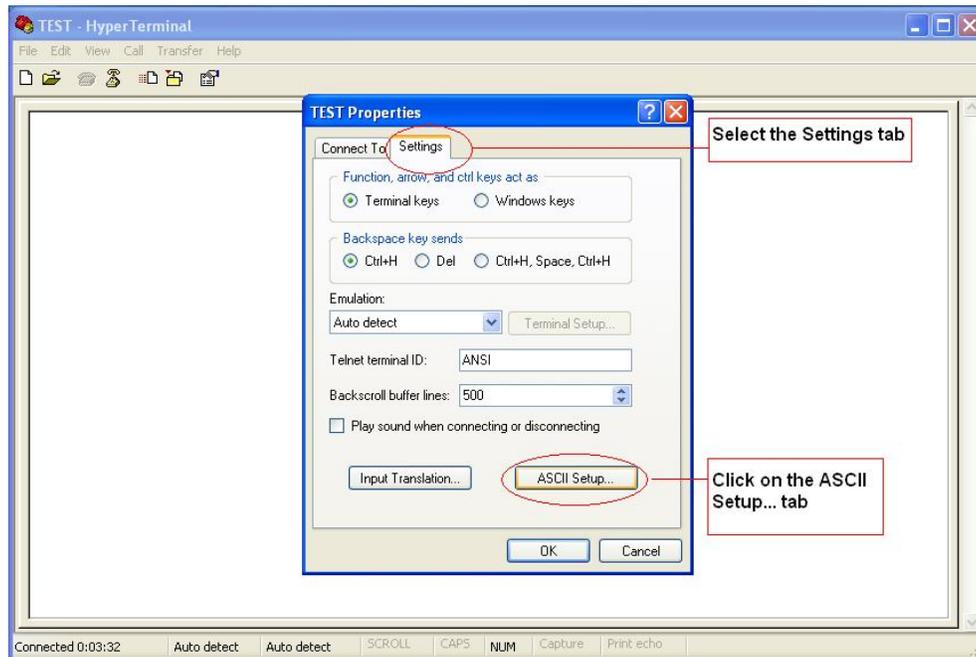

7. Select options as shown below

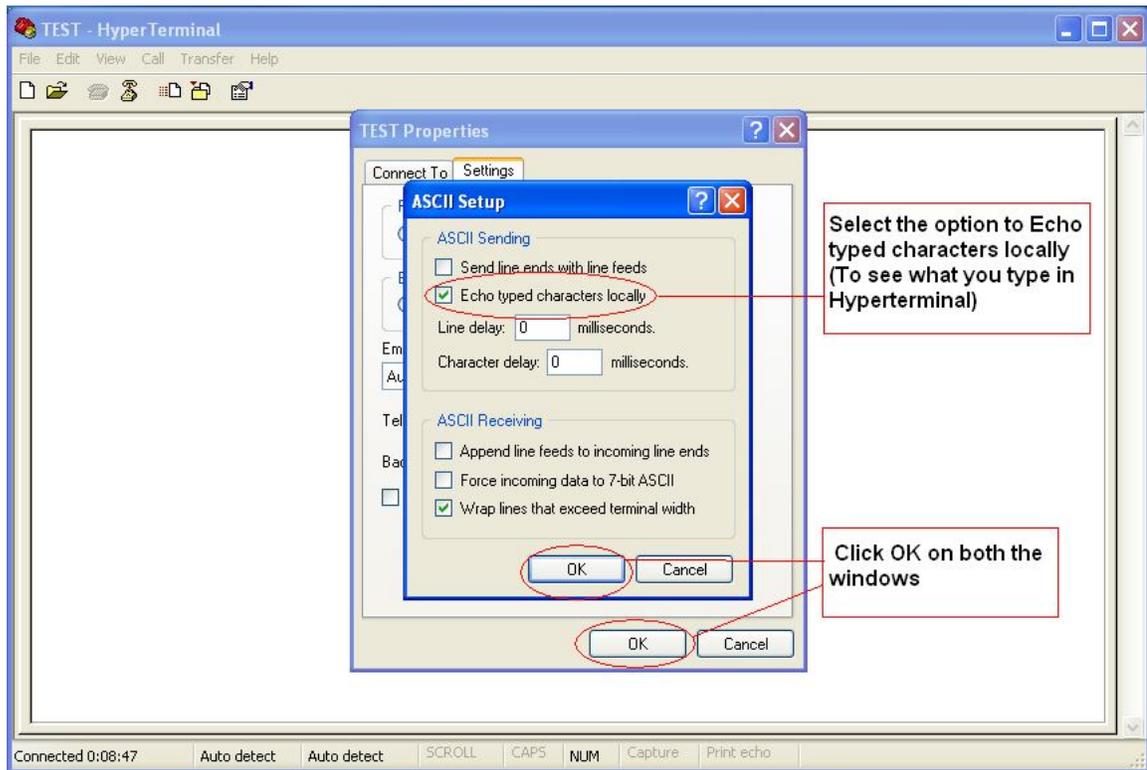

8. Finally, the Hyperterminal platform is ready .

